

BICYCLE ASSEMBLY INSTRUCTIONS STAVANGER

INDEX

\bigcirc	Dictionary 2
\bigcirc	Tool list 4
1	Unpacking5
2	Stem & Handlebar 6
3	Front wheel
4	Set bike up 9
5	Seatpost 12
6	Saddle13
7	Angles
8	Pedals16
9	Reflector17
10	All set up18

A new Pelago bicycle is packed pre-assembled in a box with most of the parts already installed.

The bicycle is packed in the box to prevent it from damage in shipping, and that's why some parts are not installed. Don't worry - assembling the bike is easy and soon you'll be riding!


These instructions are only guidelines for building up your new bicycle and there might be small variations with specific models. If you have any questions or do not understand something in the instructions, consult with your local dealer, bicycle shop or our web support.


This manual is not intended as a comprehensive use, service, repair or maintenance manual. Please see a dealer or professional bicycle service for all service, repairs or maintenance.




MANUFACTURER


Pelago Mfg Ltd. Helsinki, Finland info@pelagobicycles.com TEL +358 (0)45 161 6847 2

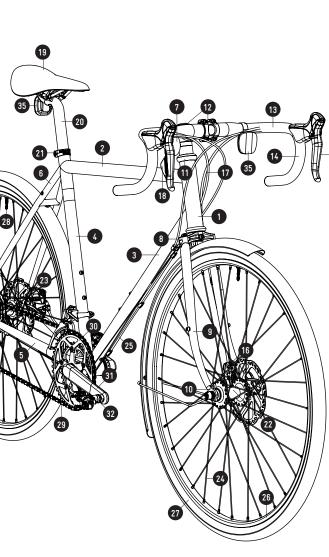

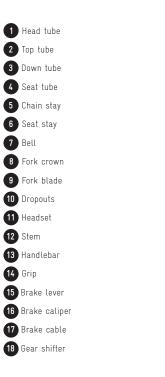


19 Saddle 20 Seat post 21 Seat post clamp 22 Front hub 23 Rear hub 24 Spokes 25 Gear cable **26** Rim 27 Tire 28 Inner tube valve 29 Chain 30 Front chainring 31 Crank arm 32 Pedal 33 Fender 34 Fender stay 35 Reflector

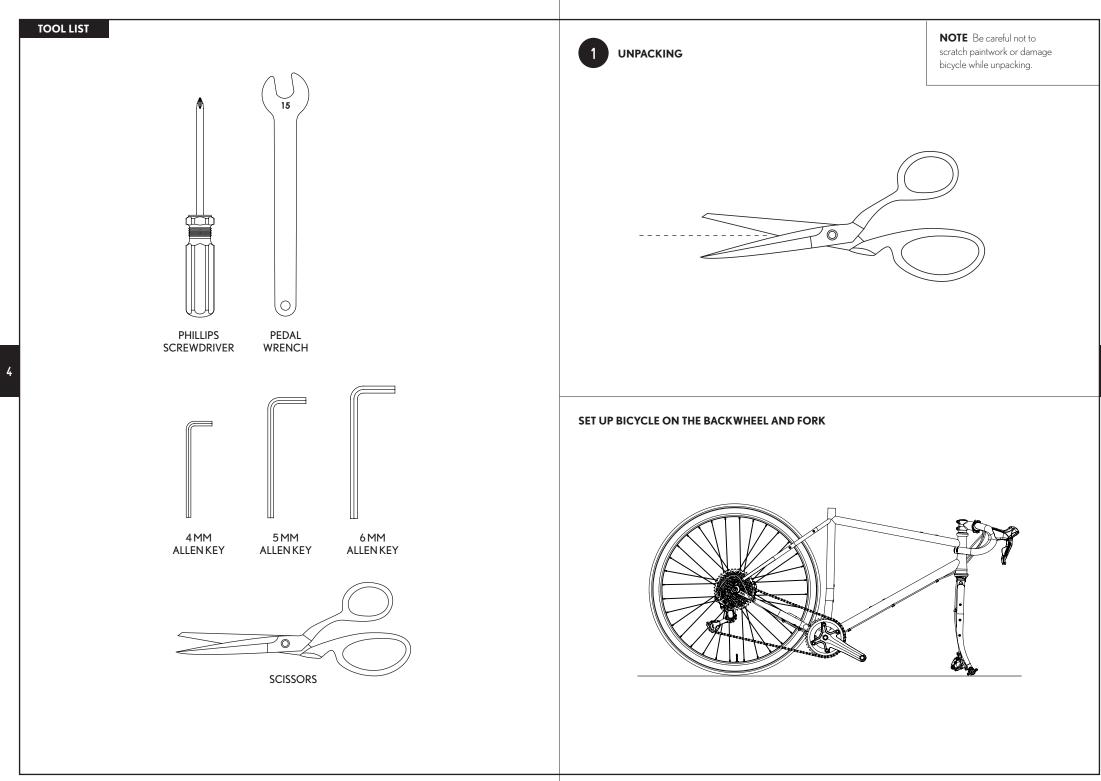

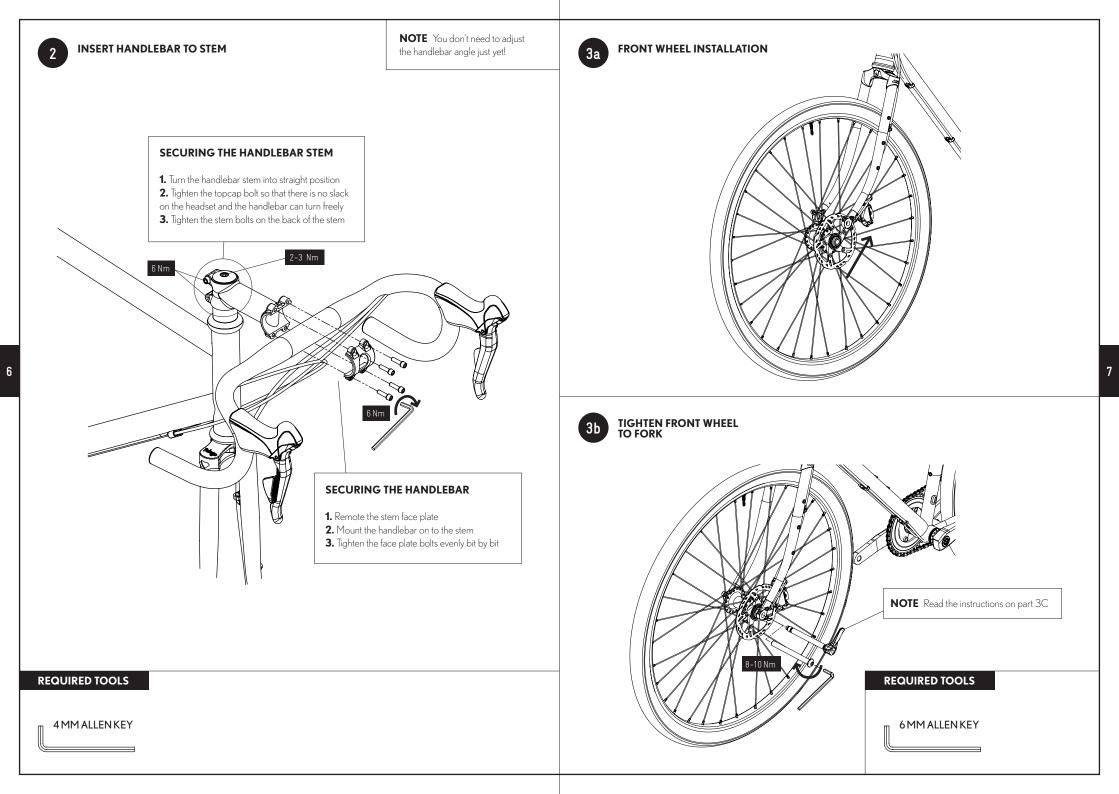



3c

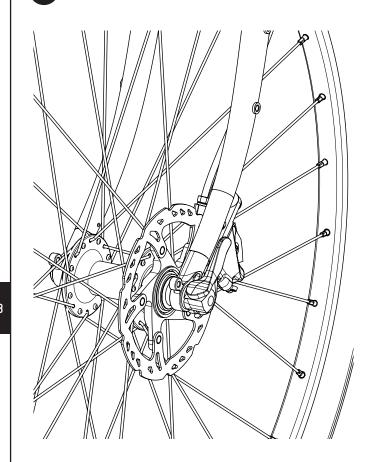

 \oslash

 \checkmark

CLOSING Srew the axle in place. After the axle is fully inserted to the fork, secure the axle by turning the lever into closed position. You can adjust the levers tightening position by micro adjusting the knob in the other end of the axle


OPENING Open the quick release lever. Turn the axle counter clock wise to unscrew the axle. Pull the axle out.

NOTE In case of uncertainty of the thru axle closing or opening operation turn to your local professional bike mechanic.


NOTE Make sure the quick release lever does not touch the disc brake rotor.


NOTE Turn the adjusting nut to the correct tightness and then close the quick release lever by hand. **DO NOT USE A TOOL**.


NOTE Make sure that the front fork does not interfere with the quick release lever. If the quick release lever is not closed properly, the wheel may fall of the bicycle and cause risk of serious injury. LAY THE BICYCLE AGAINST A WALL

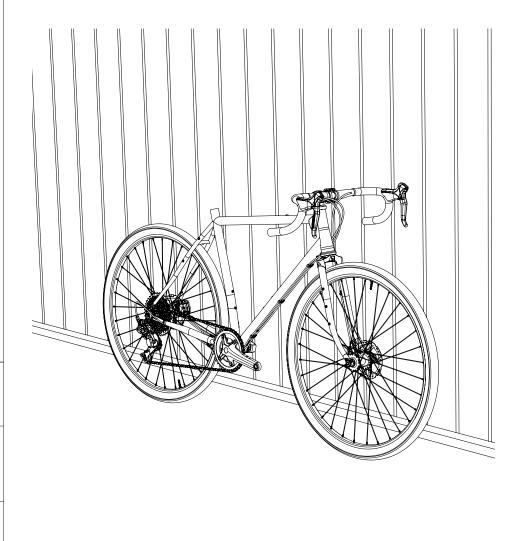

g

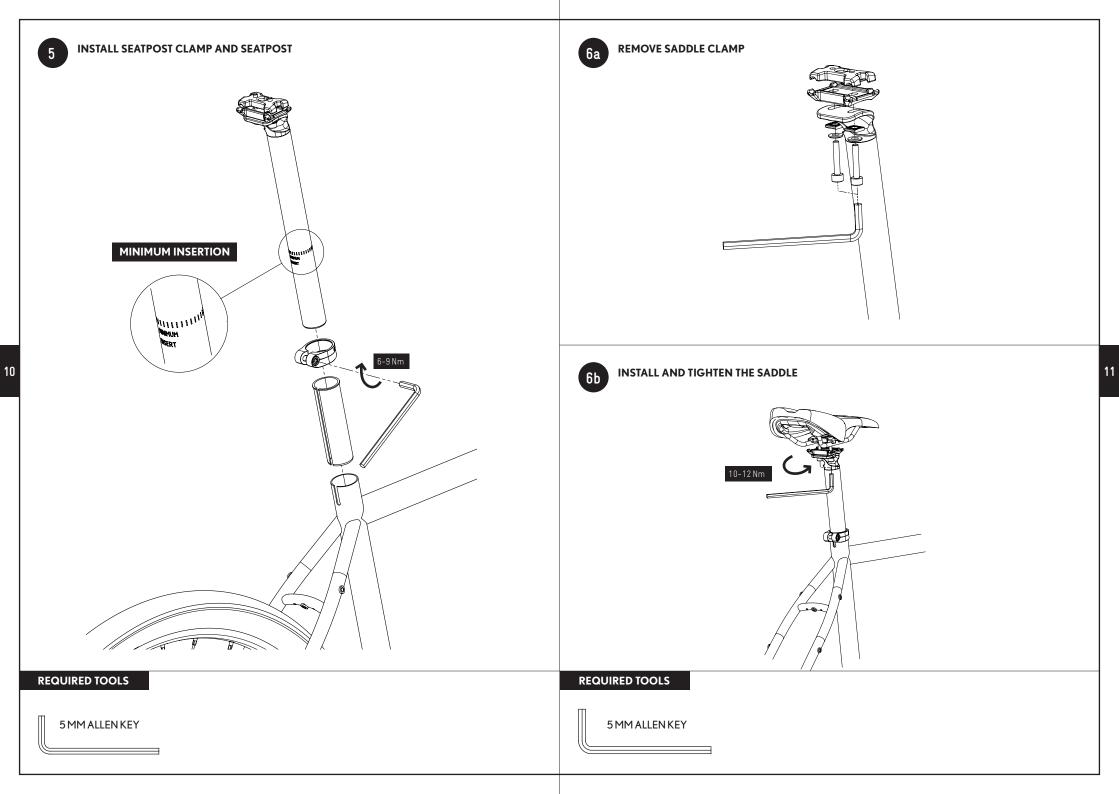

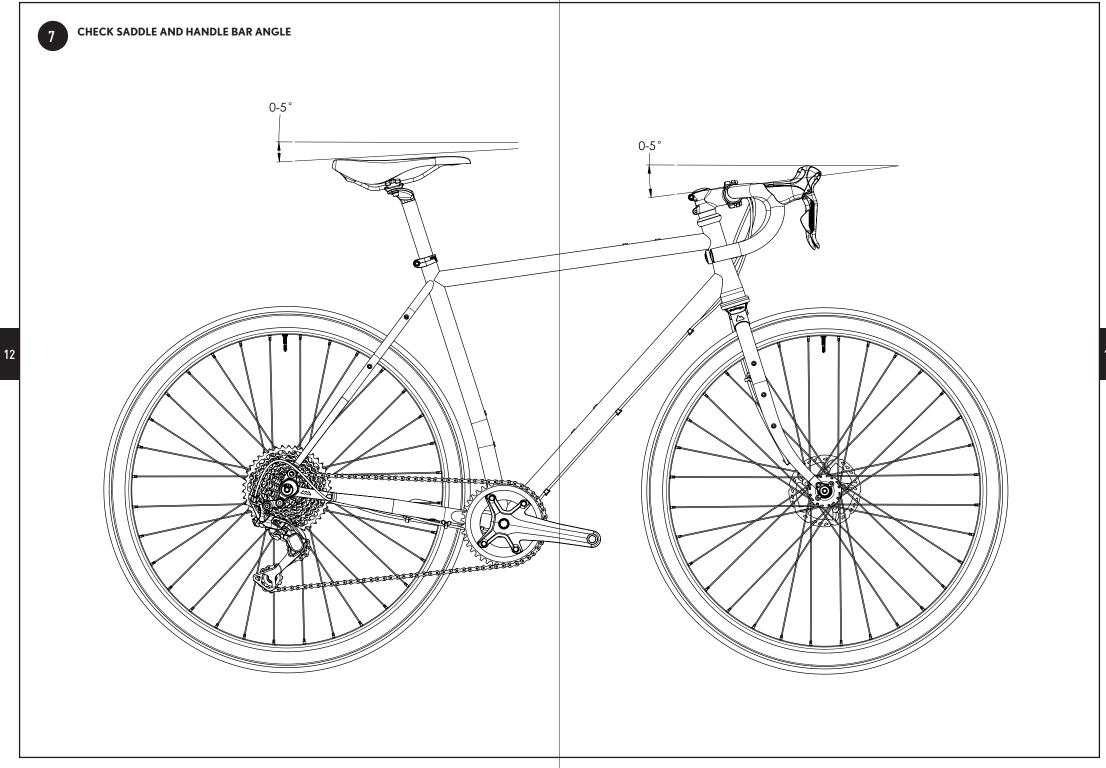

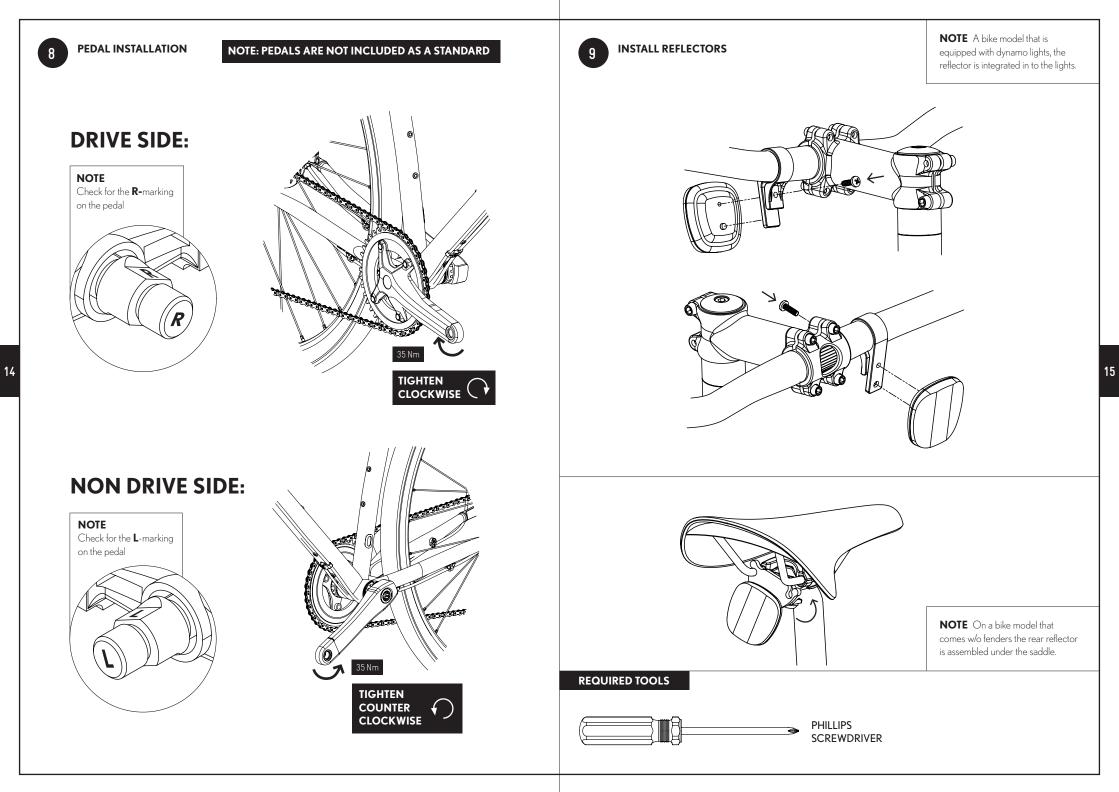

10

CONGRATULATIONS!

Your new Pelago bicycle is now assembled, but before riding remember to check the following important parts of your bicycle. It is important that all components are fastened to the correct torque and you understand the controls of your bicycle.

Check brakes.

16

Make sure your brakes work correctly and you can react and stop quickly enough in traffic. (Owners manual 43 brakes p. 70-77)

Check tyres.

Pump your tyres to the recommended pressure written on the sides of the tyres. (Owners manual 477 Tires and tubes p. 86-91)

Check gears.

Make sure your gears work correctly and you know how to use them. (Owners manual shifting gears p. 78-82) All the new components on the bicycle have a break-in period in which bolts get a bit looser, brake cables stretch and get looser and generally all parts set-in. Remember to take your bicycle to your local dealer or bicycle shop for a *first service* after about a month of getting the bicycle.

This manual is only a guideline to assemble your bicycle, so remember to read through the owners manual for more specific instructions about your Pelago bicycle.

If you are unsure or have even the slightest doubt about understand something in these instructions, we urge you to take your bicycle to a professional bicycle mechanic.



